



## GSM Voice Messaging System & Calling Features

Voice Messaging offers you a complete answering system that allows you to retrieve messages from any phone, anywhere, 24 hours a day. When you have messages waiting, you will hear short bursts of dial tone when you pick up your telephone handset prior to making or receiving a call. Please refer to your GSM wireless phone manufacturer's user guide to determine what type of voice mail icon or message waiting indicator will display on your particular phone when you have received a voice message.

### GSM Wireless Voice Mail

Number of messages stored	20
Message Length	2 minutes
Message Retention	14 days
Number of Greetings	9
Greeting Length	1 minute

### GSM Voice Mail Set Up:

#### To Set Up:

Press and hold 1 key.  
When Voice Message system answers press 9999#  
Tutorial will start and explain how to set up security code and greeting.

#### To Retrieve Voice Mail From GSM Phone:

Press and hold 1 key.  
When Voice Message system answers; enter new security code followed by the #.  
Press 1 to listen to message.  
Press 5 to delete message.

#### To Retrieve voice Mail from Landline Phone:

Dial phone number, wait for recording. During recording press \* and enter security code to access voice mail.  
Press 1 to listen.  
Press 5 to delete.

To retrieve your messages when traveling outside of XIT's coverage area, dial **806-527-MAIL (6245)**.

If you should have any questions, please call the Customer Care Center nearest you, or call **1-800-232-3312**, or dial "611" "SEND" on your wireless phone if you are within XIT Wireless's home coverage area.

### Call Waiting

This feature gives you the advantage of a second line without additional cost. Two short tones signal that a second party is trying to reach you while you are on a call.

#### To answer the incoming call:

1. Press SEND. This puts the original call on hold and connects you to the second party.
2. Press SEND again to return to original party. You can switch back and forth between the two calls by pressing the SEND key.

### Call Forwarding GSM Wireless

This feature allows all calls to be immediately forwarded to a predetermined number you have programmed to accept all calls.

#### To activate Call Forwarding:

1. Press \*21\*.
2. Dial 1 plus the 10-digit number the calls are to be forwarded to followed by the #.
3. Press SEND.

#### To deactivate Call Forwarding:

1. Press ##21#.

### Three-Way Calling Conferencing

This feature lets you add a party to an existing call. You can talk to two parties at the same time – whether it's a local or long distance call. When you terminate the call, all parties will be disconnected.

#### To activate Three-Way Calling: (GSM)

The activation process for this GSM calling feature is specific to the make and model of your phone. Check the manufacturer's user guide that came with your phone for details.

### Caller ID

This feature displays the telephone number of incoming callers before you answer the phone and keeps a list of missed calls. To access these functions, check the manufacturer's user guide that came with your phone. Features and access to Caller ID differ between brands and models of phones.