



Programming The SRC 200 Remote Control

To program your remote control, position yourself in front of the main TV and set-top box. Make sure the TV and set-top box are turned on. With remote in hand, follow these simple steps.

Acquire Gateway Numbers:

1. Press the menu button on the set-top box.
2. Have new remote pointed at the set-top box.
3. Arrow down, by using the blue arrow buttons on remote, to "remote set up."
4. Press select.
5. Press the PPV button to acquire two Gateway id numbers. You will see:
 1. Gateway id for the remote xxx
 2. This gateway requires a gateway id of xxx
6. Record the numbers for later use.

Programming the Remote:

1. Have new remote pointed at the set-top box.
2. Press the "B" button on the remote until the LED (red light) begins to flash.
3. Press the 7, 8, 9 keys in sequence.
4. Put in the gateway id from step one
5. The LED at the top of the remote should begin to flash & will then go off. If this is a previously used/programmed remote you will still need to input the gateway id from step one.
6. Press the "A" button on the remote until the LED at the top of the remote begins to flash.
7. Press the 7, 8, 9 keys in sequence.
8. Press the number key corresponding to the desired remote id.
 - 0 Source 1 = "ir" infrared. This will only work on the TV sitting with the gateway it will not work on any other TV & this TV must be set to ch 3 (also known as location 1 of the TV's in the house.)
 - 1 Source 1 = "uhf" Channel can be 3,4,5, or 6, normally 3, also known as TV 1 in the house. This will work without the RAP (antenna), or off of the RAP (antenna) placed on the back of the TV. Most TV's are set up with uhf, you will find very few set up with "ir".
 - 2 Source 2 = "uhf" This will be for the 2nd TV, it can be channel 7, 8, 9 or 10, normally 10. This TV will have a RAP (antenna) on the back of it to allow for the remote to change the channels. If the TV does not have a RAP it will need one installed.
 - 3 Source 3 = "uhf" This will be for the 3rd TV, it can be channel 11, 12, or 13, normally 13. This TV will have a RAP (antenna) on the back of it to allow for the remote to change the channels. If the TV does not have a RAP it will need one installed.

Additional Programming:

If your remote stops controlling your TV's power & volume, or you replace an existing TV with a new one, use the following instructions to reprogram your system. You need to be in front of TV the remote is to be programmed to work with. Turn the TV and Gateway on then follow the instructions below. Make sure the LED (red light) on remote lights up when power & volume are pressed. If it does not the remote will need to be replaced.

1. Press the "mute" button on the remote for 3 seconds until the LED (red light) starts to flash.
2. Press "power" on the remote – the LED (red light) should be steady
3. Press the "blue up" button on the remote slowly - every time this button is pressed the LED (red light) will go off until the TV goes off.
4. Press the "select" button to lock the code into the remote.

